




Lockline sunscreens can be installed vertically, horizontally or at any angle in between.

Typical fixing details

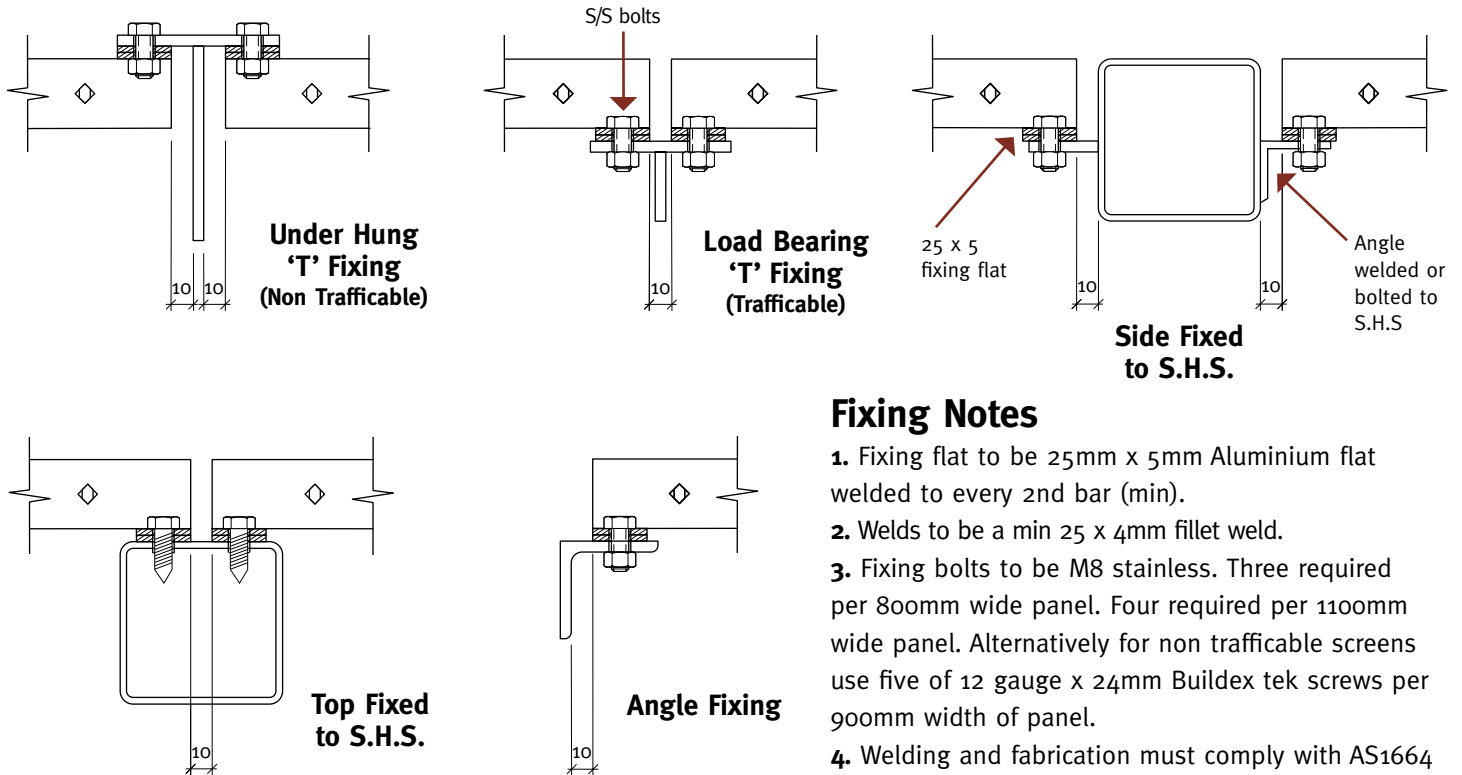

Fixing Notes

1. Fixing flat to be 25mm x 5mm Aluminium flat welded to every 2nd bar (min).
2. Welds to be a min 25 x 4mm fillet weld.
3. Fixing bolts to be M8 stainless. Three required per 800mm wide panel. Four required per 1100mm wide panel. Alternatively for non trafficable screens use five of 12 gauge x 24mm Buildex tek screws per 900mm width of panel.
4. Welding and fabrication must comply with AS1664 and AS1665.
5. Isolation tape is required between dissimilar metals to avoid possible galvanic reaction.